


Track centerlines = green

Button centerlines = blue

Plexiglas centerlines = red

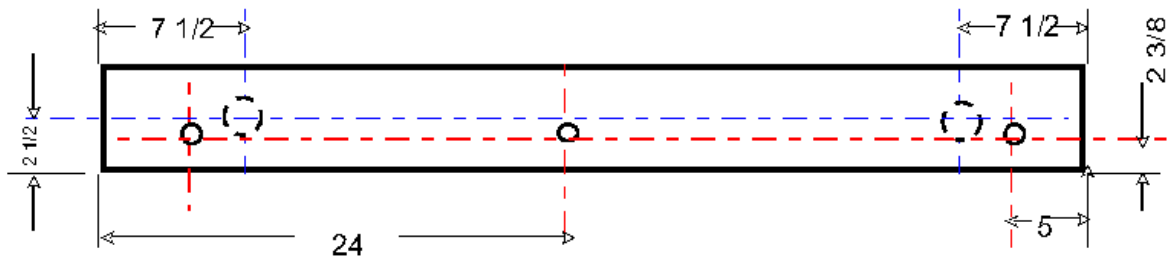

Drill holes at distances shown. If you use a spade bit, drill from both sides to avoid splitting the wood.

Plexiglas holes =  $3/8$ "

Button holes =  $1\ 1/4$ "